

Instruction manual

SM8 multi-level system

 MARCEGAGLIA





SUPPLY	<p>Various modes of supply are available:</p> <ul style="list-style-type: none"> • sale • sale with buyback agreement • rent • rent with redemption <p>All these modes of supply can be combined with the following services:</p> <ul style="list-style-type: none"> • assembly • disassembly • service at the building site
MATERIAL	<p>ZC hot dip galvanized steel</p> <p>ZZ Sendzimir galvanized steel</p> <p>ZE electro-galvanized steel</p> <p>VR painted steel</p> <p>TR tropicalized steel</p> <p>LG wood</p> <p>AL aluminium</p>
REMARKS	<p>The weight refers to nominal gage values</p> <p>* Production on request</p>

Index

SM8 MULTI-LEVEL SYSTEM DESCRIPTION

SM8 multi-level system	03
SM8 multi-level system components	05
Tube-coupler system components	13

INSTRUCTIONS FOR USE

Pre-erection	15
Erection	16
Use	18
Dismantling	19
Transport	19

ANCHORAGES

General characteristics	22
Tie anchorage	23
Ring anchorage	25
Anchorage with force screw	27
Bracing anchorage	27
Truss beam in tube-coupler anchorage	29
Anchorage with reinforced rod for reinforced concrete	31
Anchorage with steel structural plates	31

ERECTION SEQUENCE

SM8 multi-level system erection sequence	33
--	----

CERTIFICATIONS

Certifications	43
----------------	----

SM8 multi-level system description

SM8 multi-level system	04
SM8 multi-level system components	05
Tube-coupler system components	13



SM8 multi-level system

Eight-connections node system for complex-designed provisional structures with efficiency requirement during erection and dismantling

The eight-connections, multi-level SM8 system is extremely versatile solution for the erection of temporary structures.

The SM8 system consists of vertical members, the uprights, onto which a node made of an octagonal plate is welded every 500 mm; This node point is provided with eight shaped holes to receive fast-fitting joints welded on to the ends of ledgers, transoms and diagonals ledgers transoms and diagonals.

Characteristics: Great flexibility during erection • Short erection and dismantling times • Erection of service structures with 1800 mm, 2500 mm and 300 mm bay • Surface protection with hot dip galvanizing treatment.

Applications: Construction and maintenance scaffolding • Short structures and casting supports • Yard ladders • Service and promotional structures • Grandstand • Stages • Light housing tower.

MATERIAL

- Hot dipped galvanized steel S235JR, S355JR and S355MC

PROTEZIONE

- Hot dipped galvanized steel S235JR, S355JR and S355MC

CHARACTERISTICS

- Wedge junctures on 8-site punched plates welded to standards every 500 mm.
- Combinable to obtain 1.8 m, 2.5 m and 3.0 m mixed bays;
- Licensed for uniform building loads of 300 da N/mq (cl IV, EN12811).

DIMENSIONI

- Width: 810 mm and 1140 mm
- Span: 1800 mm for 2500 and 3000
- Module:
 - 2000 mm for standard scaffolding
 - adjustable height, 500 mm pitch, for special applications
- Upright and ledger tubing:
 - Ø 48.3 - 3.2 thickness
- Guard rails tubing:
 - Ø 48,3 - 3.2 thickness
- Diagonal braces tubing:
 - Ø 40/48 - 2.0/3.2 thickness



Norme di produzione


- 15/0005703/14.03.01.03 dated 30/03/2005
- 15/VI/7370/14.03.01.02 del 05/05/2008
- D.P.R. 27/04/55 n. 547
- D.P.R. 07/01/56 n. 164
- D.M. 02/09/68

- D.M. 23/03/90 n. 115
- Circolari 44/90 e 156 AA.GG./STC. 132 del 24/10/1991
- Disciplinare ACAL sul marchio SQ
- Marque NF (Normative Française) N. 16.04 du 15/10/2008



Multidirectional system SM8 - Components

Base plate

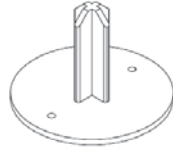


mm	material	cod IT	daN IT	cod EUR	daN EUR
48	TR	3030100006	0,92	3040501126	0,92

Adjustable base jack




mm	material	cod IT	daN IT	cod EUR	daN EUR
330	ZE	3040501062	2,42	-	-
405	ZE	-	-	3040501102	2,67
1000	ZE	-	-	3040501112	4,69

Initial component



mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150100171	2,38	3150100401	2,38

Upright with pin

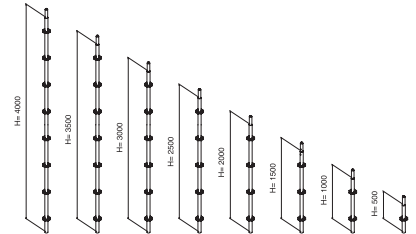


mm	material	cod IT	daN IT	cod EUR	daN EUR
500	ZC	3150100161	2,83	3150100411	2,81
1000	ZC	3150100151	5,17	3150100421	5,17
1500	ZC	3150100141	7,52	3150100431	7,52
2000	ZC	3150100131	9,86	3150100441	9,86
2500	ZC	3150100121	12,20	3150100451	12,20
3000	ZC	3150100111	14,54	3150100461	14,54
3500	ZC	3150100201	16,86	3150100471	16,86
4000	ZC	3150100101	18,40	3150100481	19,19

Spigot pin



mm	material	cod IT	daN IT	cod EUR	daN EUR
10	TR	3040701006	0,12	-	-

Ledger

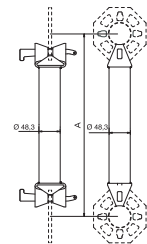


mm	material	cod IT	daN IT	cod EUR	daN EUR
424	ZC	3150200211	2,15	3150201111	2,15
480	ZC	3150300371	2,34	-	-
810	ZC	3150700291	3,60	3150201121	3,60
900	ZC	3150300241	3,94	-	-
1140	ZC	3150300201	4,80	3150201131	4,80
1800	ZC	3150200251	7,35	3150201141	7,35
2500	ZC	3150200271	10,00	3150201151	10,00
3000	ZC	3150200541	11,88	3150201271	11,88

Coupling ledger

mm	material	cod IT	daN IT	cod EUR	daN EUR
500*	ZC	3150200601	2,43	-	-
660*	ZC	3150200551	3,02	3150201161	3,02
700*	ZC	3150200581	3,18	-	-
1200*	ZC	3150200591	5,07	-	-
1360*	ZC	3150200561	5,65	3150201171	5,65
1860*	ZC	3150200571	7,56	-	-

Upper guardrail

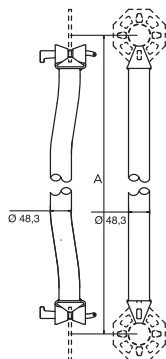


mm	material	cod IT	daN IT	cod EUR	daN EUR
424	ZC	3150200221	2,16	3150201181	2,16
660	ZC	3150200621	3,03	3150201231	3,03
810	ZC	3150200511	3,60	3150201191	3,60
1140	ZC	3150200241	4,86	3150201201	4,86
1360	ZC	3150200631	5,68	3150201241	5,68
1800	ZC	3150200261	7,36	3150201211	7,36
2500	ZC	3150200281	10,00	3150201221	10,00
3000	ZC	3150200611	11,88	3150201281	11,88

Upper coupling guardrail


mm	material	cod IT	daN IT	cod EUR	daN EUR
1200*	ZC	3150200661	5,08	-	-
1360*	ZC	3150200631	5,68	-	-
1860*	ZC	3150200641	7,57	-	-

Horizontal diagonal brace

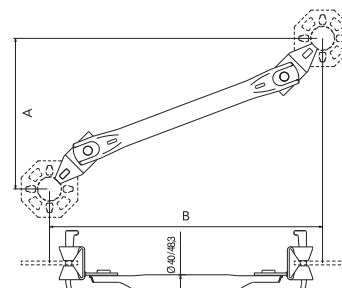


mm	material	cod IT	daN IT	cod EUR	daN EUR
810x810	ZC	3150400181	3,38	3150400301	3,38
810x1140	ZC	3150400191	3,99	3150400311	3,99
810x1800	ZC	3150400201	5,15	3150400321	5,15
810x2500	ZC	3150400211	6,45	3150400331	6,45
810x3000	ZC	3150400261	12,80	3150400341	12,80
1140x1140	ZC	3150400131	4,40	3150400291	4,40
1140x1800	ZC	3150400061	5,42	3150400271	5,42
1140x2500	ZC	3150400051	6,71	3150400281	6,71
1140x3000	ZC	3150400221	13,14	3150400351	13,14
1800x1800	ZC	3150400111	6,26	-	-
2500x1800	ZC	3150400121	7,32	-	-
2500x2500	ZC	3150400101	8,21	-	-
3000x1800	ZC	3150400231	14,02	-	-
3000x2500	ZC	3150400241	15,51	-	-
3000x3000	ZC	3150400251	16,77	-	-

Horizontal diagonal brace for upright doubling

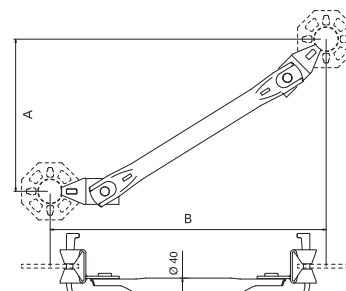


mm	material	cod IT	daN IT	cod EUR	daN EUR
154x1800	ZC	3150400071	4,83	-	-
154x2500	ZC	3150400081	6,17	-	-

Vertical diagonal brace

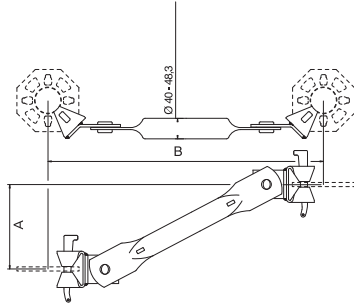

mm	material	cod IT	daN IT	cod EUR	daN EUR
1800x1000	ZC	3150500211	5,66	-	-
2000x810	ZC	3150500141	6,06	3150500371	6,06
2000x1140	ZC	3150500131	6,28	3150500381	6,28
2000x1360	ZC	3150500171	6,48	3150500441	6,48
2000x1800	ZC	3150500121	6,96	3150500391	6,96
2000x2500	ZC	3150500111	7,82	3150500431	7,82
2000x3000	ZC	3150500151	14,82	3150500471	14,82
2250x1500	ZC	3150500221	6,96	-	-

Transversal-diagonal

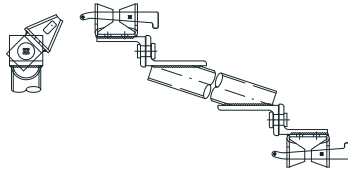


mm	material	cod IT	daN IT	cod EUR	daN EUR
810	ZC	3150500191	10,48	3150500451	10,48
1140	ZC	3150500201	10,93	3150500461	10,93

Side fencing structure




mm	material	cod IT	daN IT	cod EUR	daN EUR
1140	ZC	-	-	3150201081	13,48
1800	ZC	-	-	3150201091	15,28
2500	ZC	-	-	3150201101	17,04
3000	ZC	-	-	3150201291	20,29

Steel plank with trapdoor

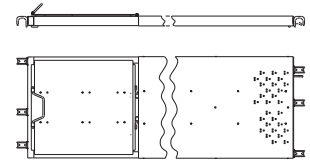


mm	material	cod IT	daN IT	cod EUR	daN EUR
1800x660x60	ZZ	3150200191	35,04	3150201011	35,04
2500x660x60	ZZ	3150200201	45,38	3150201251	45,38

Aluminium-plywood plank with frontal opening trapdoor and ladder

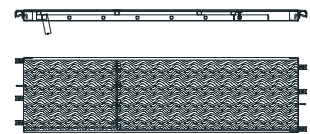


mm	material	cod IT	daN IT	cod EUR	daN EUR
2500x660	AL	3070101129	32,38	-	-

Aluminium-plywood plank with frontal opening trapdoor

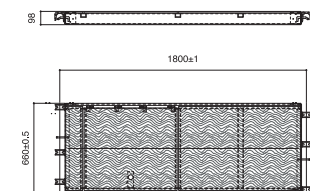

mm	material	cod IT	daN IT	cod EUR	daN EUR
1800x660	AL	3070101149	20,63	-	-
2500x660	AL	3070101139	26,35	-	-
3000x660	AL	3070101079	32,03	-	-

Aluminium-plywood plank with side opening trapdoor and ladder

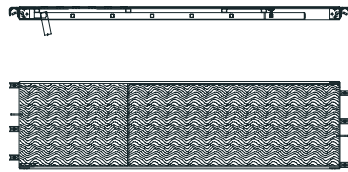


mm	material	cod IT	daN IT	cod EUR	daN EUR
2500x660	AL	-	-	3070101179	32,40
3000x660	AL	-	-	3070101099	30,08

Aluminium-plywood plank with side opening trapdoor




mm	material	cod IT	daN IT	cod EUR	daN EUR
3000x660	AL	-	-	3070101089	31,56
1800x660	AL	-	-	3070101199	
2500x660	AL	-	-	3070101189	

EU scaffold steel plank (with welded hooks)

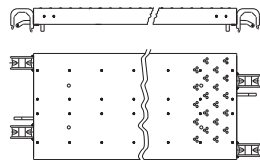


mm	material	cod IT	daN IT	cod EUR	daN EUR
1140x330x50	ZZ	3150200291	8,93	-	-
1800x330x50	ZZ	3070100701	12,80	-	-
2500x330x50	ZZ	3070100501	17,12	-	-

Securdeck scaffold steel plank

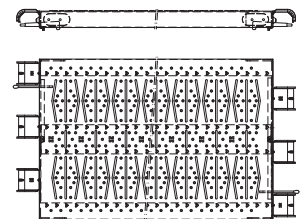


mm	material	cod IT	daN IT	cod EUR	daN EUR
1140x330x50	ZZ	3070102031	7,43	-	-
1800x330x50	ZZ	3070102041	10,80	-	-
2500x330x50	ZZ	3070102051	14,38	-	-
3000x330x50	ZZ	3070102161	16,90	-	-
3000x330x75	ZZ	3070102071	19,90	-	-

Toeboard

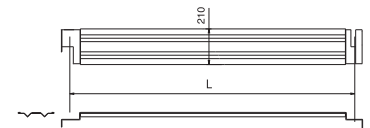


mm	material	cod IT	daN IT	cod EUR	daN EUR
424	ZC	3150200141	2,68	-	-
480	ZC	3150200531	2,80	-	-
810	ZC	3150200471	4,66	-	-
900	ZC	3150200381	4,80	-	-
1140	ZC	3150200131	5,21	-	-
1800	ZC	3150200161	6,70	-	-
2500	ZC	3150200151	8,20	-	-
3000	ZC	3150200681	9,48	-	-

Coupling toeboard

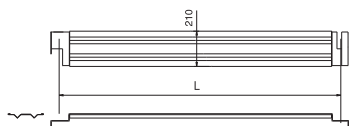

mm	material	cod IT	daN IT	cod EUR	daN EUR
660	ZC	3150200691	4,33	-	-
1360	ZC	3150200701	5,87	-	-

Metal decking filler with clamp

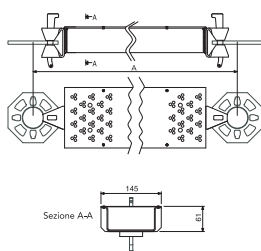

mm	material	cod IT	daN IT	cod EUR	daN EUR
660*	ZC	-	-	3150201061	4,29
810*	ZC	3150200501	5,09	3150201021	5,09
1140*	ZC	3150200321	6,85	3150201031	6,85
1360*	ZC	-	-	3150201071	8,03
1800*	ZC	3150200301	10,36	3150201041	10,36
2500*	ZC	3150200311	14,10	3150201051	14,10
3000*	ZC	3150200761	16,77	3150201321	16,77

Ladder



mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3070300131	7,35	3070300191	7,35

Ladder handrail




mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3070300141	2,78	3070300201	2,78

Bracket




mm	material	cod IT	daN IT	cod EUR	daN EUR
810	ZC	3150700281	6,52	3150700361	6,52
1140	ZC	3150700261	7,68	3150700371	8,23

Side bracket for 330 mm plank

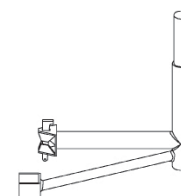


mm	material	cod IT	daN IT	cod EUR	daN EUR
424	ZC	3150700141	4,95	3150700121	4,95

Intermediate bracket

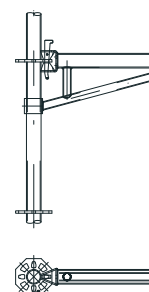


mm	material	cod IT	daN IT	cod EUR	daN EUR
330	ZC	3150700931	2,95	3150700151	3,07

Bracket strut

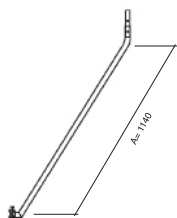

mm	material	cod IT	daN IT	cod EUR	daN EUR
810	ZC	3150700301	8,51	3150700381	10,67
1140	ZC	3150700071	9,07	3150700391	11,34

Strut for tapered end




mm	material	cod IT	daN IT	cod EUR	daN EUR
810x154	ZC	3150700031	15,52	-	-
810x480	ZC	3150700041	10,25	-	-
1140x154	ZC	3150700231	9,28	-	-
1140x424	ZC	3150700241	9,00	-	-
1140x480	ZC	3150700911	8,76	-	-

Street protection fan



mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700051	9,24	-	-

Top end



mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700211	1,49	-	-

Anchorage (A type)




mm	material	cod IT	daN IT	cod EUR	daN EUR
840	ZC	3150700161	3,73	-	-

Anchorage (B type)




mm	material	cod IT	daN IT	cod EUR	daN EUR
1190	ZC	3150700171	4,89	-	-

Walkthrough passage

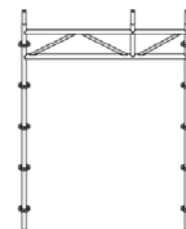


mm	material	cod IT	daN IT	cod EUR	daN EUR
1710	ZC	3150800151	42,58	3150800181	40,77

Walkthrough passage

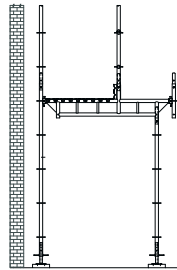


mm	material	cod IT	daN IT	cod EUR	daN EUR
1950	ZC	3150800261	18,61	3150800161	18,61

Bridging ledger




mm	material	cod IT	daN IT	cod EUR	daN EUR
3600x500	ZC	3150800221	40,13	-	-
5000x500	ZC	3150800201	52,96	-	-
3600x600	ZC	3150800231	45,41	3150800291	45,41
5000x600	ZC	3150800241	58,48	3150800301	58,48
6000x600	ZC	3150800271	67,30	3150800311	67,30

Bridging ledger junction

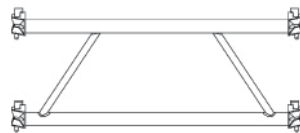


mm	material	cod IT	daN IT	cod EUR	daN EUR
810	ZC	3150800131	8,21	3150800321	8,21
1140	ZC	3150800211	11,63	3150800331	11,63

Lowered beam

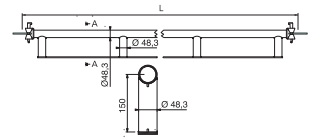


mm	material	cod IT	daN IT	cod EUR	daN EUR
1800	ZC	3150300301	13,27	3150300801	13,27
2500	ZC	3150300401	17,46	3150300811	17,46
3000	ZC	3150300501	21,40	3150300821	21,40

Reinforced beam

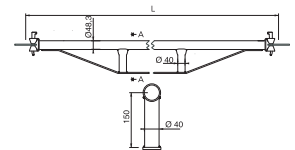


mm	material	cod IT	daN IT	cod EUR	daN EUR
1800	ZC	3150300601	11,97	-	-
2500	ZC	3150300701	15,48	-	-

Filler for 2500-mm beam

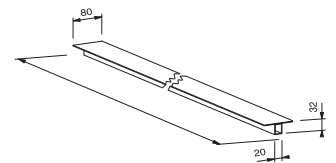


mm	material	cod IT	daN IT	cod EUR	daN EUR
1800	ZC	3150200361	4,29	-	-
2500	ZC	3150200331	6,03	-	-

Filler for 3000-mm beam

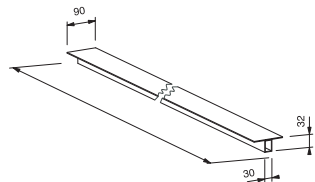


mm	material	cod IT	daN IT	cod EUR	daN EUR
1800	ZC	3150200841	5,01	-	-
2500	ZC	3150200851	7,04	-	-

Deck plug

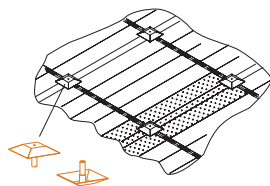

mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700221	2,12	-	-

Eight-connections node

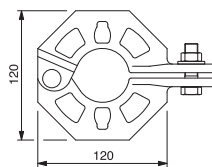

mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700201	1,12	-	-

Clamp with rotating half coupler



mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700331	1,60	-	-

Clamp with perpendicular, flat-welded half coupler




mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700251	1,52	-	-

Clamp with vertical, flat-welded half coupler



mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700321	1,52	-	-


Clamp for upright doubling

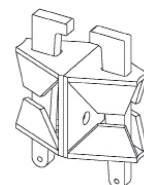

mm	material	cod IT	daN IT	cod EUR	daN EUR
-	ZC	3150700181	1,12	-	-


Tube-coupler system - Components

Base plate

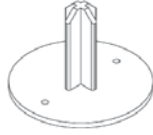

mm	material	cod.	daN
48	TR	3030100006	0,92

Adjustable base jack

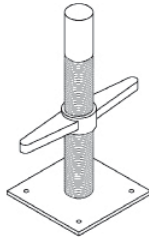

mm	material	cod.	daN
330	ZE	3040501062	2,42
1000	ZE	3040501012	4,50

2-bolts right angle coupler



mm	material	cod.	daN
-	TR	3020600006	0,88

4-bolts right angle coupler



mm	material	cod.	daN
-	TR	3020300006	1,42

Simple 4-bolts coupler



mm	material	cod.	daN
-	TR	3020200006	1,93

Swivel coupler



mm	material	cod.	daN
-	TR	3020400006	1,45

Pivot coupler



mm	material	cod.	daN
-	TR	3020000006	1,73

Simple coupler




mm	material	cod.	daN
-	TR	3020500006	0,69

Head coupler




mm	material	cod.	daN
-	TR	3020100006	0,94

Scaffold tube S235JR

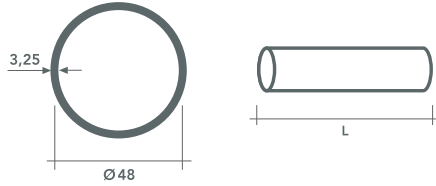

mm	material	cod.	daN
-	VR	3010100000	3,30/ml
L = 400	VR	3010104000	-
L = 500	VR	3010105000	-
L = 600	VR	3010106000	-
L = 750	VR	3010107500	-
L = 900	VR	3010109000	-
L = 1000	VR	3010110000	-
L = 1200	VR	3010112000	-
L = 1250	VR	3010112500	-
L = 1500	VR	3010115000	-
L = 1800	VR	3010118000	-
L = 2000	VR	3010120000	-
L = 2250	VR	3010122500	-
L = 2500	VR	3010125000	-
L = 2750	VR	3010127500	-
L = 3000	VR	3010130000	-
L = 3250	VR	3010132500	-
L = 3600	VR	3010136000	-
L = 4000	VR	3010140000	-
L = 4500	VR	3010145000	-
L = 5000	VR	3010150000	-
L = 5400	VR	3010154000	-
L = 6000	VR	3010160000	-

Scaffold tube S235JR

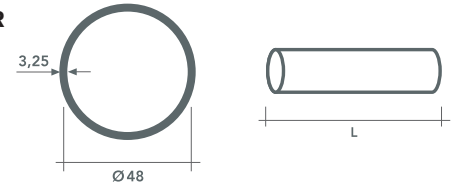

mm	material	cod.	daN
-	ZZ	3010800035	3,30/ml
L = 400	ZZ	3010804035	-
L = 500	ZZ	3010805035	-
L = 600	ZZ	3010806035	-
L = 750	ZZ	3010807535	-
L = 900	ZZ	3010809035	-
L = 1000	ZZ	3010810035	-
L = 1200	ZZ	3010812035	-
L = 1250	ZZ	3010812535	-
L = 1500	ZZ	3010815035	-
L = 1800	ZZ	3010818035	-
L = 2000	ZZ	3010820035	-
L = 2250	ZZ	3010822535	-
L = 2500	ZZ	3010825035	-
L = 2750	ZZ	3010827535	-
L = 3000	ZZ	3010830035	-
L = 3250	ZZ	3010832535	-
L = 3600	ZZ	3010836035	-
L = 4000	ZZ	3010840035	-
L = 4500	ZZ	3010845035	-
L = 5000	ZZ	3010850035	-
L = 5400	ZZ	3010854035	-
L = 6000	ZZ	3010860035	-

Pin



mm	material	cod.	daN
-	VR	3030000000	0,63

Steel caster



mm	material	cod.	daN
-	VR	3030300000	10,00

Anchoring screw



mm	material	cod.	daN
-	-	3030200000	1,68

Steel caster with rubber coating



mm	material	cod.	daN
-	VR	3030300010	9,55

Instructions for use

Pre-erection _____	16
Erection _____	17
Use _____	19
Dismantling _____	20
Transport _____	20



Pre-erection

CHECKING THE TECHNICAL DOCUMENTATION

The documentation described in the following sections must be available on the work site at all times.

Some of the documentation will be provided by the scaffolding manufacturer and some by the authorized technician from the Company making use of the scaffolding.

Project

Full details of the scaffolding must be given and detailed erection designs must be attached containing construction details-where applicable-detailing:

- anchorages
- structural nodes
- load distribution at the base
- specific information regarding the correct erection of the scaffolding in question

The project must respect the regulations of the countries where the scaffolding is to be erected. For non-standard configurations or configurations higher than 20 m, it is suggested that a project signed and stamped by the authorized technician be drawn up.

Technical Report

The report must contain all static verifications that fall outside those described in the Ministerial Authorizations or standard designs. It must be signed and stamped by an authorized technician.

Instruction manual and Anchorage manual

These are documents provided by the manufacturer to ensure correct use of its products.

CHECKING THE MATERIAL TO BE USED

The quality and quantity of all materials that are to be used must be carefully checked prior to use on site as described below.

Correspondence between materials used and those that have been authorized

The materials listed on the specifications and those that are on the work site must be checked to ensure they match. Using parts from scaffoldings made by other manufacturers is not allowed. Mixed use of couplings/tubes that integrate with the scaffolding system is permitted. Each part of the scaffolding can be mounted separately from an adjoining part within a single system and joined to non-structural tubes/couplings.

Personal safety

All personal safety devices required by law must be available on the work site and utilized by the workers. These devices are:

Safety belts

These must meet European regulation requirements, bear the CE marking and must have passed the prescribed technical testing.

Clothing

Working attire - overalls, gloves, shoes and all clothing must bear the CE mark and comply with EN 510 Cat.II. Standards.

Other provisions

A room or location should be set aside on the work site for first aid in the event of accidents. A first-aid kit must also always be on hand for immediate, preliminary assistance with injuries.

Material suitability

It is good practice on the work site to arrange for all parts of the scaffolding to be periodically examined to ensure that all is in working order.

For rented equipment, it is especially important that the end user company and the manufacturer of the rented equipment draw up a monitoring plan, paying particular attention to the following:

- *Checking the verticality of the uprights. Inclines greater than the manufacturer's declared dimensional tolerance are not acceptable.*
- *Checking the welding on prefabricated frames. Should a visual check raise concerns about the condition of a frame, use Magniflux or other similar penetrant liquid methods and/or discard the frame.*
- *Checking that the pawls and bushings for diagonal and transom couplings are working properly. Avoid using deformed and/or rebuilt elements.*
- *Checking the painted or galvanized surface protection. To ensure prolonged durability over time and depending on the location where being used, check all elements carefully to ensure there is no oxidation.*
- *Checking that the coupling grips (6 daNm) are tight, also checking the condition of the threads of the bolts being used. All nuts must always screw and unscrew perfectly.*
- *Check that the metal ledger boards clamp together properly by making use of the device located on the planks for the purpose.*
- *Checking the straightness of the couplings used. Plastic deformations of any of the element that comprises the system are not acceptable.*

A compulsory check of the scaffolding soundness must be carried out after each major climatic event. This can also include materials that have not yet been erected.

Storage on the work site

An area on the work site should be set aside for storing the scaffolding material to facilitate movement and organize the loading and unloading of material in the best manner possible, thereby reducing operational costs and the risks of accidents that are a common occurrence in disorganized environments.

For tall buildings, partial storage of quota material is advisable by making use of loading areas duly set up that can then be used even after the scaffolding has been erected, thereby facilitating work on site. Materials should be stored in appropriate containers and storage chests. It is essential that a covered area also be made available (shed or alternative) to bench-mount joints, or where checks can be carried out on materials.

Erection

During the erection stage, the mounting designs and the prescriptions issued by the Site Engineer must be scrupulously followed. As regards the stages of scaffolding erection, adhere to local regulations. The main areas on which to focus attention during the erection stages follow.

STARTING POINT OF THE SCAFFOLDING

The elements described below must be carefully verified and checked.

Scaffolding bases

An outline of the scaffolding corresponding to the erection plan must be marked off.

The maximum distance from the building (20 m) must be respected and checked.

Should this not be possible, with the approval of the project designer or Works Director, add approach planks to the façade or guardrails even on the inner side.

Face

Before laying the bases, a suitable face must be prepared of coarse gravel and/or lean concrete if there are to be heavy loads at the foot, or, more generally, wooden approach planks must be laid out continuously, lengthways along the façade.

Controls at the foot of the scaffolding

It is good practice to at least carry out the following checks at the foot of the scaffolding:

- *Avoid placing more than 2 planks under the base.*
- *Always rivet the base plates to the planks.*
- *Check the screwing out of the base plates. Screwing out to a maximum of 20 cm is recommended. Greater screwing out is permitted as long as specific technical verifications have been carried out or additional cross bracings are added at the base of the scaffolding.*
- *Check that the faces are level and that they are centered in relation to the bases.*
- *Check the correct distribution of loads at the foot of the scaffolding, verifying the consistency, efficiency and proper placement of the distribution elements placed under the base plates (wooden planks, metal plates, concrete screw nuts, etc.).*
- *Check the correspondence between the start of the scaffolding uprights in use against those in the erection design and especially the designs found in the system Ministerial Authorization Booklet. Should they not correspond, the technical documentation must be modified by modifying the project or, if necessary, modifying the erection depending on choices made for the project.*

SCAFFOLDING STRUCTURE

It is important that periodic checks be scheduled for the following:

Verticality of the uprights

The verticality of the uprights must be checked periodically. Inclines other than those foreseen in the dimensional allowance designs of the system's elements are not permitted.

In the event that uprights are not parallel to a plumb line, they must be dismantled and erected again, if possible, or alternatively appropriate static verifications must be carried out that will guarantee that the specific scaffolding is suitable to fulfill the requirement for which it was initially intended.

Should dismantling and re-erection of the scaffolding not be possible, joints can be used to add a parallel reinforcing upright to the existing scaffolding.

Anchorage

Anchorage must be positioned every 22 square meters of scaffolding façade or, in special cases, in the number and in the positions shown in the erection plan. The type of anchorages, their functioning, the static verifications and the checks to be carried out are information that must be provided together with the technical documentation.

Access ladders

The rungs of the scaffolding ladders must conform to the requirements of the EN12811 standards, moreover the following must be checked:

- *The type of ladder must conform to regulation requirements and with what is described in the manufacturer's manual.*
- *A protective guardrail must always be installed.*
- *The ladders must be self-blocking and fitted with anti-slip feet.*

Wood planks

Wood planks must always conform with what is shown in the design plan and, in particular, the following points must be carefully checked:

- *The planks must be free of traversing knots and in any event, the reduction of the reagent section areas must not be more than 10%.*
- *Declared minimum thicknesses must always be respected.*
- *Planks with overlaps (corners or changes of direction) must be appropriately riveted, above all in scaffoldings where wooden joists are carrying the scaffold (for example on loading mounts).*

Connections

As a minimum, the following must be checked:

- *Plugs: Plugs must be present and properly inserted in all the joints in the frame and loose uprights, and in all the items listed in the manufacturers' manual.*
- *Gudgeon pins: Plugs must be present and properly inserted in longitudinal tube joints when using the tube-coupler system.*
- *Wedge couplings: in multi-level systems in which wedge coupling connections are used, the correct insertion of the wedge into the node plate must be verified before proceeding with the erection of the next piece*

Grip of the joints

It is imperative that the correct grip of the joints (6 daNm) be checked

with a torque wrench of all the structures or parts of particularly important structures:

- *projecting parts*
- *truss beams*
- *hoisting connections*
- *anchorages*

The checks must be carried out periodically, even while the scaffolding is in use, at intervals to be determined according to the use being made, but not longer than 2 months.

In any case, a check must be carried out following a major climatic event.

Metal ledger boards

The correct erection of the metal ledger boards must be checked, as must their detachment prevention locks, using a suitable device (a triangular rod or wedge).

Loading mounts

In cases where loading mounts with wooden scaffolding are used, the following must be checked:

- *Adherence of the trusses to the project specifications regarding dimensions, number and position.*
- *In any case, position the trusses close to the structural nodes.*
- *Check the correct thickness and positioning of the wooden planks.*
- *Check that the planks are riveted to the trusses.*
- *Check that the work loads are compatible with those specified in the project.*

Service lifts to the scaffolding

When lifts are installed, the proper positioning of the anchorage must be checked and above all that such anchorages are completely separate from those of the scaffolding.

If this is not possible, the special anchorages to be used must be covered by a report on the calculations, and by a specific erection plan showing the loads to be borne.

Protective sheets

In cases where protective sheets are used the following must first be ascertained:

- *Determine the sheet permeability to wind; the information should be provided by the manufacturer; if it is not, ascertain wind permeability experimentally, empirically or theoretically.*
- *Verify that the permeability coincides with that indicated in the calculation report. Should it not, adjust verifications to the new loads and, if necessary, integrate the scaffolding and anchorage structures.*
- *In such event, pay particular attention to check that the erection and functioning of the anchorages correspond with the designs and verifications detailed in the designs*

Use

Winches and Pulleys

When winches or pulleys – even temporary – are used, the parts of the scaffolding affected by such equipment must be checked.

The checks must be shown on the calculation report if the equipment is also to be used during work execution.

The carrying capacity of the winch or pulley must always be visible and adjustable. In the absence of specific information in this regard, the following formula may be used to determine the dynamic increment of the vertical load in suspension for carrying out correct static checks:

ϕ = coefficient of dynamic increase

V = speed of the load in movement expressed in m/sec

$\phi = 1 + 0,6 \times V$

PERSONNEL SAFETY DURING INTERMEDIATE ERECTION STAGES

In addition to the prescriptions stipulated by local regulations, the main areas on which to focus attention are described below.

Scaffolding workers

The scaffolding safety plan must have the names and specific responsibilities of the persons involved in organizing the work and erecting the scaffolding.

Holding and auxiliary cables

Check the correct positioning and use of the holding and auxiliary cables as prescribed by the regulations in force and check in detail the stipulations regarding their length and strength.

Use of personal safety devices

The correct use and efficiency of safety clothing having the characteristics already described in the 'Personnel safety' section must be checked periodically. The period is determined in relation to the duration of the work and of the personnel present on the work site.

Hoisting of materials

This is a dangerous phase of the works during which the following precautions must be taken:

- *Check the load capacity, the type and the correct functioning of the winch and the pulley. Also check the 'Winches and Pulleys' section regarding technical verifications.*
- *Organize the work in such a way that there are never loads suspended above the heads of workers mounting the equipment.*
- *Check that the bay on which the raised material is to be stacked is suitable for carrying the weight. Check the technical specifications and the calculation report to ascertain the projected technical capacities.*

Overlapping of personnel

Organize the erection teams in such a way that they are never positioned one above the other on the same part of the scaffolding.

While works are underway the scaffolding may undergo structural modifications due to the particular requirements of the work site not taken into account during the planning stage.

It is important that the scaffolding be checked continually and that, as a minimum, the following are verified.

Overloads

In the event the end user requests unusual overloads, notices indicating the load capacity must be positioned on the scaffolding and checks that the assembled structure corresponds to the project design and the calculation report must be carried out.

Passive security elements

Periodically checks must be carried out to ensure that passive security devices have not been removed from the scaffolding; these include:

- *overhead and frontal guardrails*
- *frontal and overhead toeboards*

Planks with trapdoors must be shut if not in use.

The anchorages must never be removed unless such is called for under the work program and in the erection plan of the scaffolding.

Machinery present on the scaffolding

Unless otherwise prescribed, boring machinery, vibrators, compressors and whatever else could affect the stability of the scaffolding must not be used.

In the event the job calls for such type of machinery, check that the dynamic increase of the load has been taken into account in the calculation report.

Earthing

The presence and the type of earthing present on the scaffolding must be calculated in accordance with the regulations in effect.

In the same way the documentation relating to the machinery on the scaffolding must always be checked and brought up to date.

Dismantling

During dismantling, as during the erection stage, all precautions required by the regulations in force relating to safety equipment must be taken.

At the very least, the following areas must be checked.

Removal of passive safety devices

- *When dismantling the scaffolding floor by floor, check that in the transitory stage, and after the removal of the protective guardrails, no workers are present on that floor or at least that they are adequately protected with safety belts, holding and auxiliary cables on rigid parts of the structure such as done during the erection stage.*
- *During partial dismantling of the following piers, check that guardrails and the head toeboards are always reassembled.*
- *The movement of material disassembled from the scaffolding must always be organized in a closed and safe manner. Storage of materials on the scaffolding must be avoided at all times.*

Anchorage

- *Floor anchorages must only be disassembled after having dismantled the overhead structure.*
- *Always check that at all times - including the dismantling stage of the scaffolding - that no portions are higher than 4 m above the level of the last anchorage.*
- *Where there are projecting parts, the anchorages and the parts of the structure subject to pull must be dismantled working on the bay below.*

Storage

Set aside and display items which have been damaged or deformed.

On the ground, in an area of the work site that has been set aside (see 'Storage on the work site'), set aside all dismantled materials, organized by categories, tying them in bundles or putting them in their packaging to facilitate loading and transport.

Transport

Transport must be organized in detail analogous to the preceding phases and, as a minimum, paying particular attention the areas described below.

Supply

Transport must be staggered so that only the materials that are strictly necessary during the erection stage are on hand, thereby avoiding excessive stock piles within the worksite.

Check the size, the holding capacity of the delivery area as well as the rate at which the scaffolding is being erected (see 'Storage on the work site').

Materials

Check the correspondence between the projected supply quantity, the materials present on the worksite and those listed on the travel documents.

Returned materials

Returned material must be organized in containers by planks, frames and accessories so that the best use is made of available space and the number of journeys is kept to minimal.

Anchorage

General characteristics _____	22
Tie anchorage _____	23
Ring anchorage _____	25
Screw-down anchorage _____	27
Bracing anchorage _____	27
Truss beam in tube-coupler anchorages _____	29
Anchorage with reinforced rod for reinforced concrete _____	31
Anchorage with steel structural plate _____	32



General characteristics

JOINT CREEP STRENGTH

During static checks, creep strength must be considered and determined through crimp tests in officially and legally recognized laboratories:

• Right-angle couplers with 4 bolts

average resistance: $R_m = 1915 \text{ daN}$

resistance at 5% fracture: $R_5 = 1756 \text{ daN}$

permissible resistance: $R = 1756/1,5 = 1170 \text{ daN}$

• 4-bolt right-angle coupler with holding joint

average resistance: $R_m = 2855 \text{ daN}$

resistance at 5% fracture: $R_5 = 2717 \text{ daN}$

permissible resistance: $R = 2717/1,5 = 1811 \text{ daN}$

CHARACTERISTICS OF THE MATERIALS USED

Materials having the geometrical and mechanical characteristics listed below are to be used:

Tube $\varnothing 48.3 \times 3.2$ in S235JRH steel

$A = 4,59 \text{ cm}^2$

$J = 11,69 \text{ cm}^2$

$W = 4,85 \text{ cm}^3$

$i = 1,59 \text{ cm}$

$\sigma 1 = 1600 \text{ daN/cm}^2$

$\sigma 2 = 1800 \text{ daN/cm}^2$

LOADS

Load bearings are determined orthogonally and longitudinally on the scaffolding façade and those acting on the single anchorages in accordance with the regulations in force and the project calculation designs.

Determine:

F_1 = orthogonal load acting on the scaffolding façade and on the single anchorage

F_2 = longitudinal load acting on the façade of the scaffolding and on the whole scaffolding

SPLIT RINGS

The extraction strength of the split rings must be provided by the manufacturer and in any case it is a good rule to apply a safety factor of $\gamma=1,5$.

Ring properties to be requested from the manufacturer:

A_t = area of the leg of the ring on the wedge insert

W_t = resistance module corresponding to area A

$\sigma = 1600 \text{ daN/cm}^2$ salvo diversa prescrizione del produttore


H = permissible resistance to the extraction of the ring using a safety factor of x 1.5 on the completed withdrawal value supplied by the manufacturer.

Tie anchorage


ERECTION PLAN

Effected according to the following layouts:


A

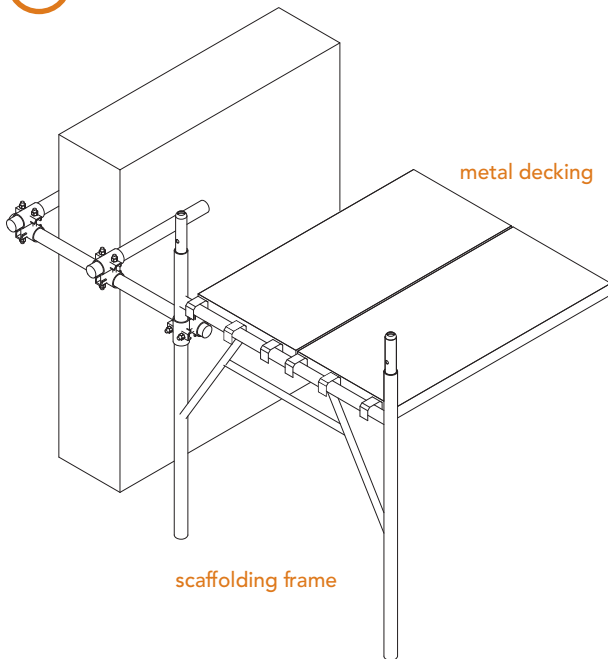

C

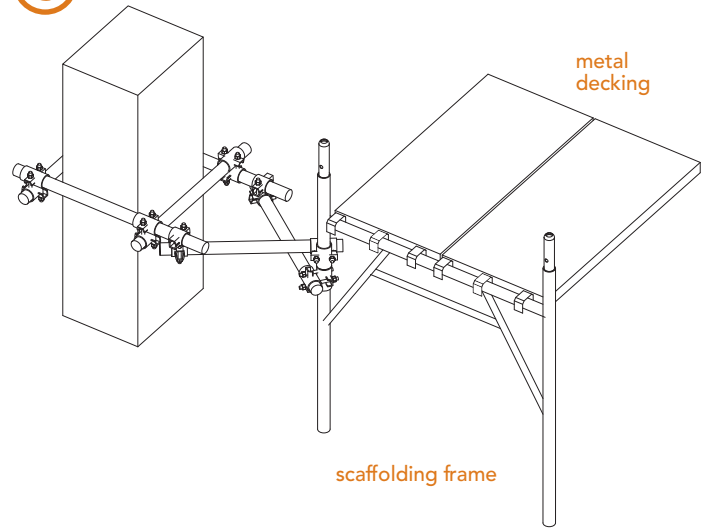

B

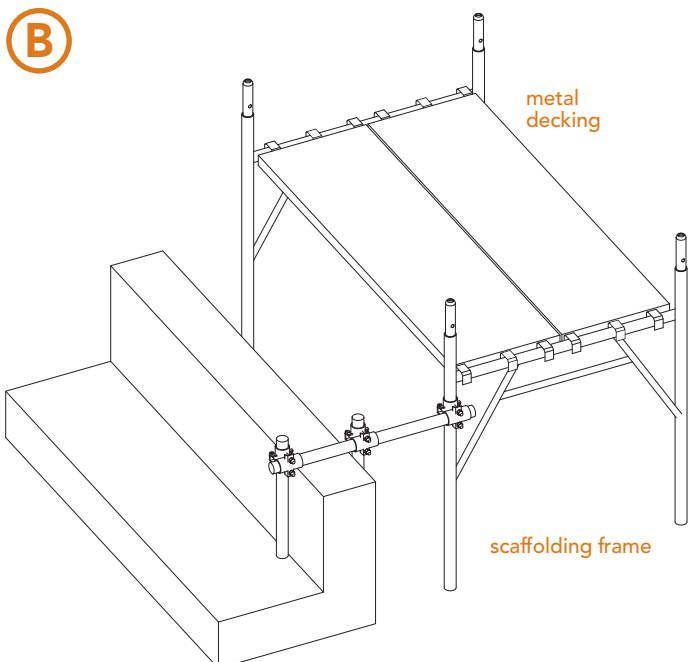

Tie anchorage

CHECKING THE ANCHORAGE SUBJECT TO AN F_1 LOAD

Checks to be carried out are the following:

- **joint creep check:**

$$F_1 < R$$

- **tensile strength check of the anchorage tube:**

$$\sigma = \frac{F_1}{A} < \sigma_1$$

- **compression strength check of the anchorage tube**

L = the free length of the anchorage tube

$$\lambda = \frac{L}{i}$$

The value of ω in relation to λ is determined according to regulations in force.

- **instability check**

$$\sigma = \omega \frac{F_1}{A} < \sigma_1$$

Should the instability check not pass the test, the anchorage tube must be sectioned making use of tube-couplers or the anchorage tube must be doubled.

CHECKING THE ANCHORAGE SUBJECT TO AN F_2 LOAD

The whole scaffolding's F_2 load can be absorbed by a number of C type anchorages strategically distributed on the scaffolding façade, but preferably, barring any obstacles, along the scaffolding outer piers.

Placing n the number of C type anchorages on the scaffolding, the acting load on each will be: $F^* = F_2/n$.

Load acting on a single anchorage tube with an inclination of α :

$$F_d = \frac{F^*/2}{\cos \alpha}$$

L = the free length of the anchorage tube

$$\lambda = \frac{L}{i} \text{ from which is determined } \omega$$

$$\sigma = \omega \frac{F_d}{A} < \sigma_1$$

WARNINGS





When using tie anchorages, it is recommended to carry out the following:

- check the correct hold of the anchorage joints to ensure creep resistance;
- connect the anchorage tubes in line with the structural nodes of the scaffolding;
- insert wooden planks as load distributors between the tie anchorage tube side/edge and the structure of the building being worked on to avoid contact stress peaks (Hertzian pressure), which could otherwise be damaging to the structure.

Ring anchorage

ERECTION PLAN

Effected according to the following layouts

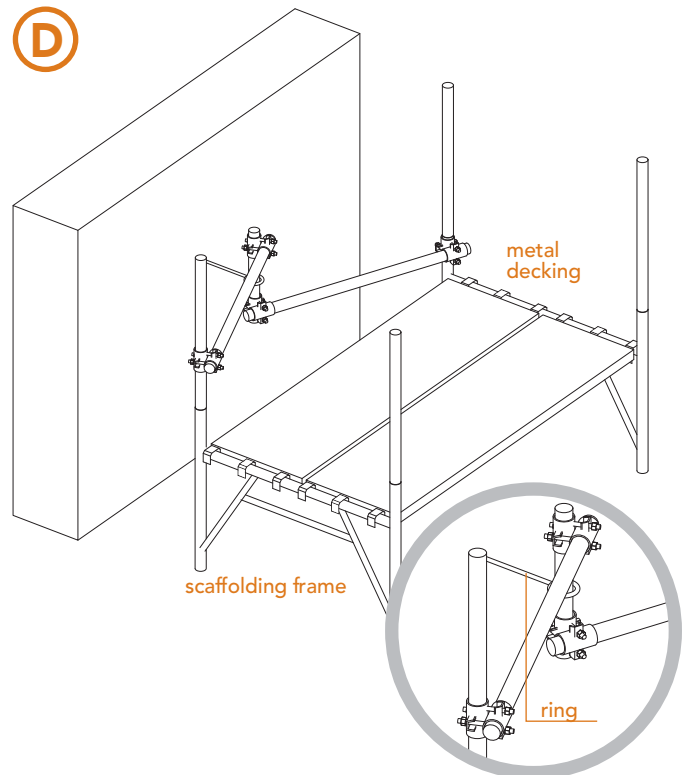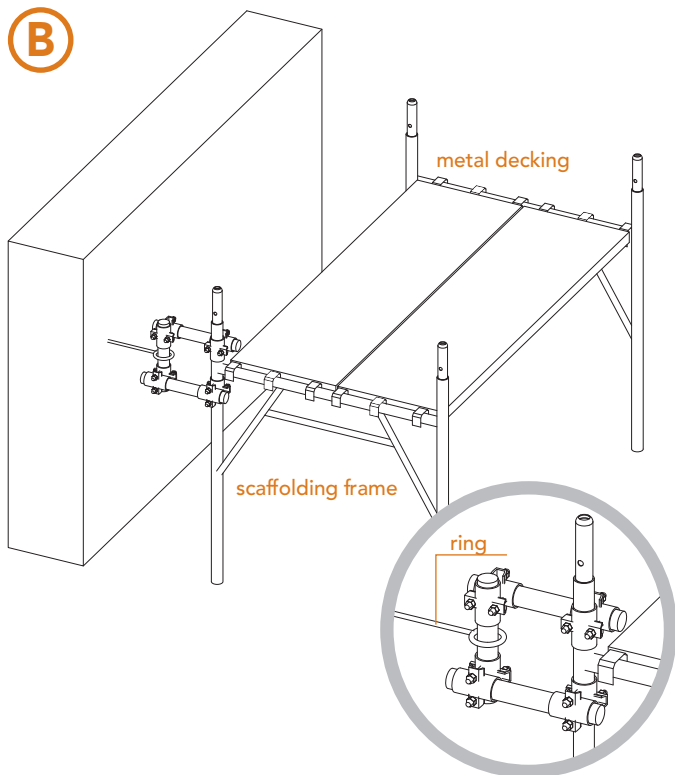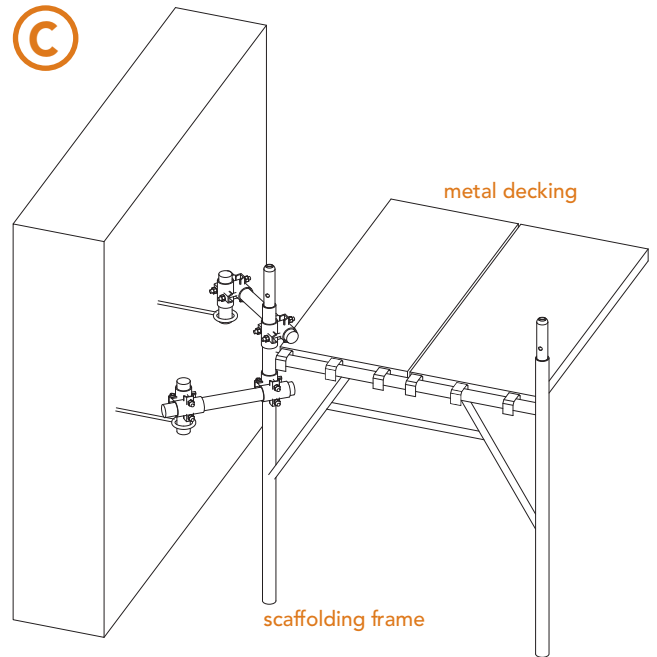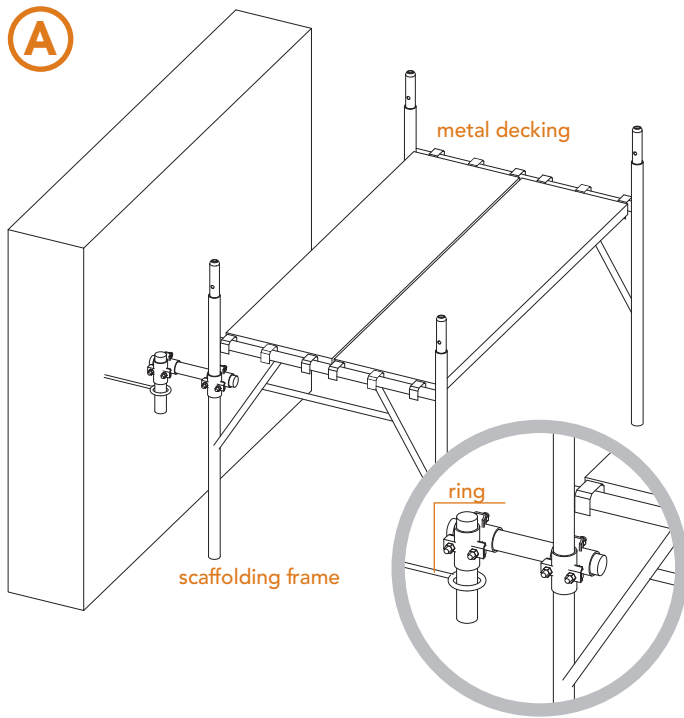

Ring anchorage

CHECKING THE ANCHORAGE SUBJECT TO AN F_1 LOAD

The checks to be carried out are the following:

- **joint creep check:**

$$F_1 < R$$

- **tensile strength check of the anchorage tube:**

$$\sigma = \frac{F_1}{A} < \sigma^*$$

- **tensile buckling of the anchor check:**

consider a pull eccentricity on the anchor $e=4$ cm for A type anchorages. Stress acting on the anchor:

Tensile stress: F_1

Bending moment: $M_1 = F_1 \times e$

Verify:

$$\sigma = \frac{F_1}{A_t} + \frac{M_1}{W_t} < \sigma^*$$

- **tensile stress check of the anchor**

For symmetric type B anchorages, stress will be that of simple traction only:

$$\sigma = \frac{F_1}{A_t} < \sigma^*$$

- **extraction check of the anchor**

R_E = resistance to extraction as provided by the manufacturer of the anchors.

$$H = \frac{R_E}{1,5} \text{ permissible resistance to extraction}$$

Verify:

$$F_1 < H$$

CHECKING THE ANCHORAGE SUBJECT TO AN F_2 LOAD

F_2 loads as calculated in the 'Loads' section is divided on n number of C or D type anchorages.

Load acting on an individual anchorage:

$$F^* = F_2/n.$$

Load acting on single anchorage tube having an inclination of α :

$$F_d = \frac{F^*/2}{\cos \alpha}$$

- **checking the anchorage tube:**

L = the free length of the anchorage tube

$$\lambda = \frac{L}{i} \text{ from which is determined } \omega$$

$$\sigma = \omega \frac{F_d}{A} < \sigma_1$$

- **tensile buckling check of the anchor:**

Tensile stress: F_d

Bending moment: $M = F_d \times e$

Verify:

$$\sigma = \frac{F_d}{A_t} + \frac{M}{F_d} < \sigma^*$$

WARNINGS

For ring anchors the following verifications are recommended:


- check the type and consistency of the wall and, according to the acting load, choose the most suitable type of anchor as supplied by the manufacturer.
- reduce the 'e' eccentricity of the joint between the anchorage tube and the anchor to the minimum possible.
- check the correct hold of the joints.
- check the correct placing and working of the mounted anchors. In special cases, it is advised that extraction tests are carried out so that reliable values can be obtained of the actual resistance to extraction.

Anchorage with force screw

Bracing anchorage

ERECTION PLAN

Effected according to the following layout

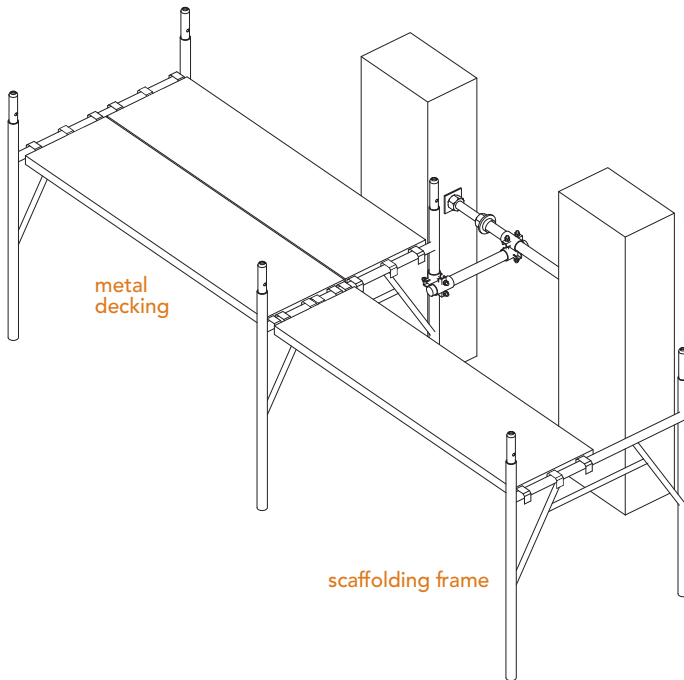

In special cases, when other types of anchorages are not permitted, force screws can be used, provided their working is checked and monitored while in use.

The risk in using these types of anchorages lies in the difficulty of determining the resistance that such anchorages can guarantee.

The resistance of the anchorage is in proportion to the force that the screw is able to ensure and to the friction coefficient lying between the wall and the force plate.

To correctly define the load of force, load cells placed the bases may be used. However, such a solution is costly and only justifiable for very particular types of work.


An alternative solution consists of determining whilst work is in progress the actual resistance RR on a trial anchorage and using a calculation of permissible resistance: $R_c = RR/2$.

WARNINGS

It is recommended to connect the anchorage tube as near as possible to the force screw or at the extremity of the tube in order to avoid bending the tube itself.

ERECTION PLAN

A monolateral constraint, resistant only to erected compression as laid out in the following diagrams.

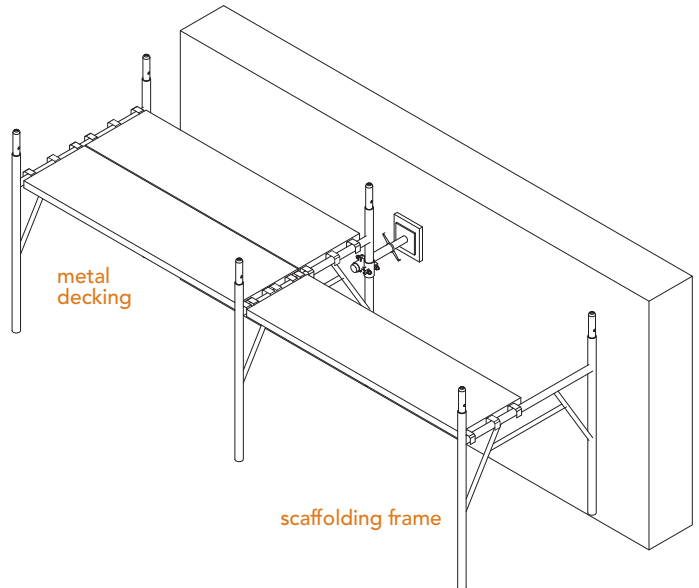

LOADS

The bracing anchorage may only take orthogonal compression loads on the façade. The F_1 load acting on each orthogonal anchorage on the scaffolding façade is determined in accordance with the calculations detailed in the project and the regulations in force. The F_1 load can be made up of two addends:

$$F_1 = F_{1a} + F_{1b}$$

F_{1a} = compression component on the anchorage caused by orthogonal wind pressure on the scaffolding façade

F_{1b} = compression component on the anchorage arising from the structural geometry. For example, the horizontal component of the load carried by the brace of the jutting, shown in 'Erection plan - Bracing anchorage'.

CHECKING THE ANCHORAGE SUBJECT TO AN F_1 LOAD

The checks to be carried out are the following:

- **joint creep check:**

$$F_1 < R$$

- **compressive strength check of the anchorage tube:**

L = free length of the anchorage tube

Bracing anchorage

$$\lambda = \frac{L}{i} \quad \text{from which } \omega \text{ is derived from the tables of existing standards and regulations.}$$

Checking instability

$$\sigma = \omega \times \frac{F_1}{A} < \sigma_1$$

- **compressive strength check of the regulating screw**

Limit the screwing out of the screw within a maximum of 15 ÷ 20 cm in order to omit factors of instability and only carry out resistance checks.

$$\sigma = \omega \times \frac{F_1}{A} < \sigma_1$$

- **check the wooden planks distributors**

Place a wooden plank underneath the base of the regulating screw to act as a load distributor

S = 5 cm plank thickness

A_L = 400 cm² 20 x 20 cm plank

σ_L = 60 daN/cm² permissible stress on the wooden plank

Resistance check:

$$\sigma = \frac{F_1}{A_l} < \sigma_L$$

WARNINGS


For bracing anchorages, it is recommended to carry out the following:

- check the correct positioning, the quality and the efficiency of the wooden planks under the base acting as the load distributors
- limit the screwing out of the regulating screw to never exceed 20 cm
- check the proper dismantling of the joints so as to guarantee creep resistance.

Truss beam in tube-coupler anchorage

ERECTION PLAN OF HORIZONTAL BEAMS

For buildings under construction with framed structures in reinforced concrete or steel, or for building maintenance with large areas of glass, it is not possible to distribute the anchorages uniformly on the façade of the scaffolding. In such cases, truss beams in tube-couplers can be used laid out horizontally or vertically on the inside of the scaffolding framework in such a way as to disperse the wind pressure on to the anchorages at the end of the truss beams only.

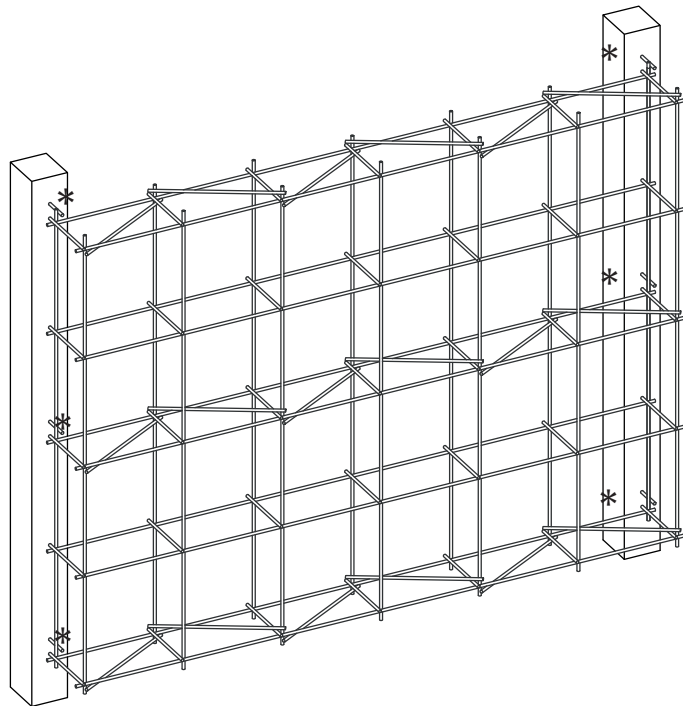


* Typical anchorage

ERECTION PLAN OF VERTICAL BEAMS

Truss beams can be erected on every bay or on alternate bays to act as loads.

Truss beams can be mounted on alternating piers or on all the piers to act as loads, and especially depending on whether or not metal ledger boards are present on each bay acting as braces and, therefore, as horizontal load distributors.

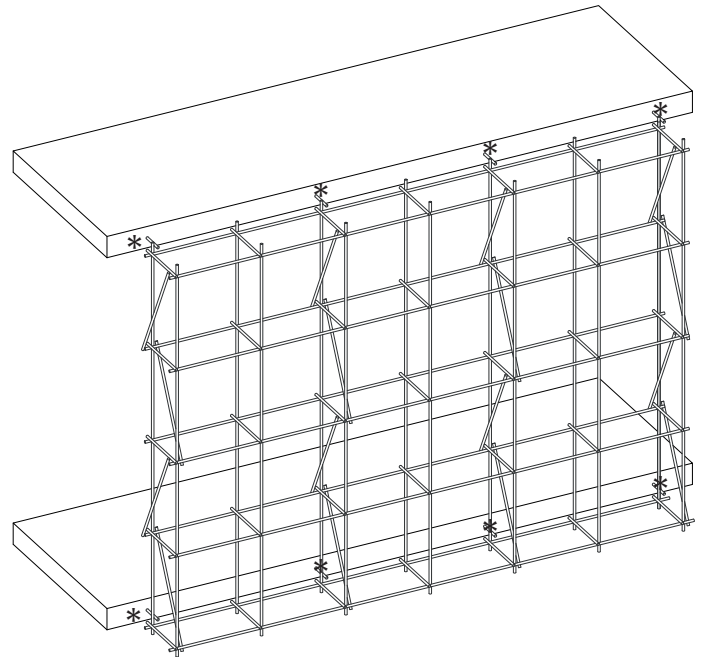

* Typical anchorage

Truss beam in tube-coupler anchorage

LOADS


The wind pressure (P_w) is calculated according to the regulations and standards in force and the project diagrams applicable to the scaffolding surface exposed to the wind. The nodal load acting on the truss beam anchorages must be calculated.

• horizontal truss beam

For example for diagram No. 1 in the 'Truss beam in tube-coupler anchorage' section, there must be 2 modules on every node. The result is the following:

$$Q_0 = P_w \times 2S_w$$

A static layout of horizontal truss beam anchorages:

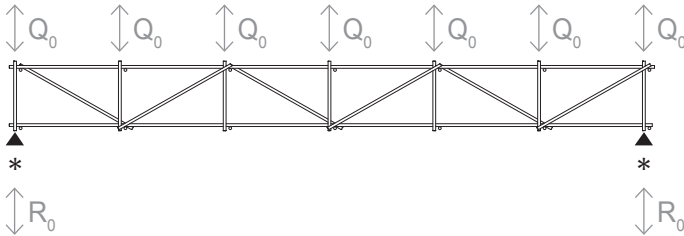


• vertical truss beam

For example, in design no. 2 in the 'Truss beam in tube-coupler anchorage' section, there must be 2 modules on every node. The result is the following:

$$Q_v = P_w \times 2S_w$$

Static diagram of the anchoring vertical truss beam

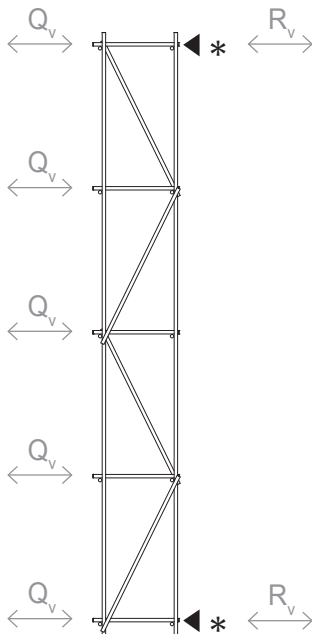

CHECKING THE TRUSS BEAMS

Having defined the acting loads and the static diagrams as explained in the previous section, proceed with defining the truss beams using the Ritter method or models utilizing finished elements or whatever other methods are available for the purpose of obtaining the maximum stress loads:

T_{max} = maximum shear action

M_{max} = maximum bending moment

• horizontal anchorage beam

Use tubes of $\varnothing 48.3 \times 3.2$ steel 235JRH for constructing the beams described in the previous sections.

Both the transoms and the diagonals of the beams are added to the scaffolding structure and immediately laid underneath the metallic decking which forms the work bays.

Such beam elements will therefore only be subject to loads arising from the results of the preceding sections.

Therefore resistance and instability checks are carried out on the transoms and diagonals most subject to stress.

• vertical anchorage beams

The diagonals are made of tubes $\varnothing 48.3 \times 3.2$ in S235JRH steel coupled to the transoms with swivel joints, while the beam transoms take advantage of the scaffolding uprights.

The resistance and instability checks of the scaffolding uprights must therefore take into account both the vertical loads of traditional scaffolding on the uprights and the loads consequent to the bending moment acting on the vertical truss beam.

ANCHORAGES OF THE EXTREMITIES

Every truss beam must be anchored to the part it is serving.

Refer to the anchorage types already described and see previous section for the checks that have to be carried out.

WARNINGS

It is recommended to check the following:

- check the tightening torque of the joints
- check for the presence of metal ledger boards on bays which act as horizontal load dividers
- depending on the type of anchorages placed on the end of the truss beams, see the applicable warnings that apply to each under 'Warnings'.

Anchorage with reinforced rod for reinforced concrete

ERECTION PLAN



CHARACTERISTICS OF THE MATERIALS USED

Materials having the geometrical and mechanical characteristics listed below are to be used:

Tube Ø 48.3 x 3.2 in S235JRH steel

$$A = 4,59 \text{ cm}^2$$

$$J = 11,69 \text{ cm}^2$$

$$W = 4,85 \text{ cm}^3$$

$$i = 1,59 \text{ cm}$$

$$\sigma 1 = 1600 \text{ daN/cm}^2$$

$$\sigma 2 = 1800 \text{ daN/cm}^2$$

Tonde Ø 8 FEB44K steel reinforcing rod for reinforced concrete

$$\sigma A = 2.600 \text{ daN/cm}^2$$

$$\sigma A = 0,5 \text{ daN/cm}^2$$

LOADS

The type of anchorage is only capable of supporting orthogonal loads to the façade. For loads parallel to the façade, other types of anchorages must be used as described above.

F1 load are determined in accordance with the regulations in force and the calculation designs of the project.

CHECKING THE ANCHORAGE SUBJECT TO AN F_1 LOAD

The checks to be carried out are the following:

- **joint creep check:**

$$F_1 < R$$

- **tensile strength check of the anchorage tube**

$$\sigma = \frac{F_1}{A} < \sigma 1$$

- **reinforcing rod check**

The type of concrete and its characteristic R_{bk} resistance should be considered;

in the absence of such information, assume $R_{bk} = 250 \text{ daN/cm}^2$

Based on the R_{bk} , the regulations in force provide the value of the resistance to adhesion of the reinforcing rod (τ_{co}).

The resistance to adherence of the rod in the concrete (R_A):

\varnothing = reinforcing rod diameter

L' = length of each of the 2 sections of reinforcing rods present within the concrete casting

τ_{co} = concrete adherence resistance

$$R_A = (\varnothing \times \pi \times L' \times 2) \times \tau$$

- **adherence of the rod in the concrete check**

$$F_1 < R_A$$

- **strength check of the reinforcing rod**

$$\sigma = \frac{F_1}{2 \times A_A} < \sigma_A$$

WARNINGS


The following is recommended:

- check the correct positioning of the rod in the concrete and the technical/geometric properties (Φ ; A_A)
- check the correct hold of the joints.

Anchorage with structural steel plates

ERECTION PLAN

In the event of there being a particular geometry to the scaffolding (suspended bearing) and/or particularly high loads, a steel plate joined to the wall with mechanical anchors can be used.

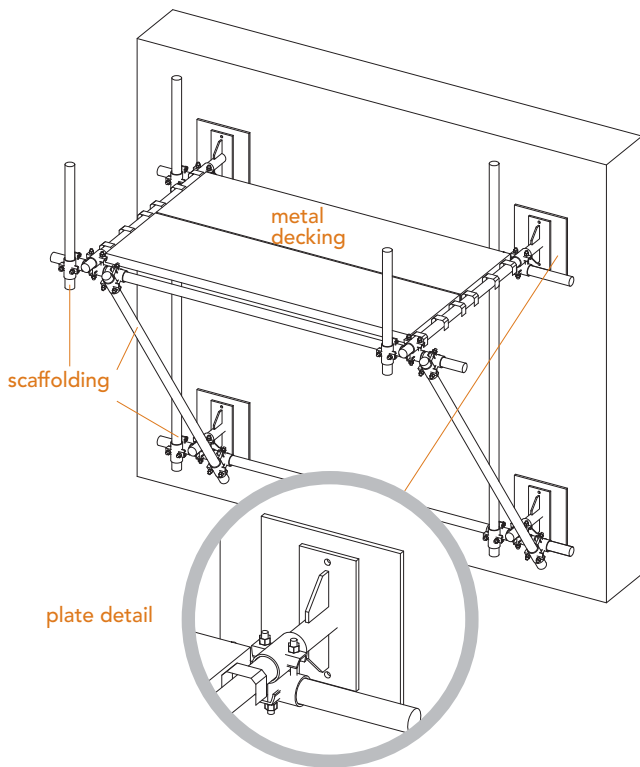

CHARACTERISTICS OF THE MATERIALS USED

Materials having the geometrical and mechanical characteristics listed below are to be used:

Tube Ø 48.3 x 3.2 in S235JRH steel

$$A = 4,59 \text{ cm}^2$$

$$J = 11,69 \text{ cm}^2$$

$$W = 4,85 \text{ cm}^3$$

$$i = 1,59 \text{ cm}$$

$$\sigma 1 = 1600 \text{ daN/cm}^2$$

$$\sigma 2 = 1800 \text{ daN/cm}^2$$

Anchorage with structural steel plate; S235JR steel

Should ribbing be found, the geometric/mechanical properties to be taken into consideration are:

A_p = reagent area of the ribbing section

W_p = resistant module of the ribbing section

$$\sigma 1 = 1600 \text{ daN/cm}^2$$

$$\sigma 2 = 1800 \text{ daN/cm}^2$$

LOADS

The acting load on the anchor plate is transmitted by the ledger or by the upright that is directly attached to it.

In general and in particular for the layout shown in 'Anchorage with structural steel plate', the vertical load applied by the scaffolding uprights must be added to the wind element.

CHECKING THE ANCHORAGE PLATE

With reference to the erection diagram and the 'Anchorage with structural steel plate' loads, carry out resistance checks on the plates acting as loads:

• upper plate:

$$T = N_i$$

$$N = N_i \times e$$

resistance check

$$\sigma = \frac{M}{W_p} < \sigma 1$$

$$\tau = \frac{T}{A_p} < \pi 1$$

$$\sigma_{id} = \sqrt{\sigma^2 + 3 \pi^2} < \sigma 1$$

• lower plate

$$T = N_e$$

$$N = H$$

$$M = N_e \times e$$

verification of the anchors

$$\sigma = \frac{N}{A_p} + \frac{M}{W_p} < \sigma 1$$

$$\tau = \frac{T}{A_p} < \pi 1$$

$$\sigma_{id} = \sqrt{\sigma^2 + 3 \pi^2} < \sigma 1$$

• verification of the anchors

The loads acting on the single anchors are:

$$T_b = \frac{T}{2} \quad \text{shear on the single anchor}$$

$$N_b = \frac{M}{d} \quad \text{shear on the single anchor}$$

The T_b and N_b values must be compared with the bearing capacities of each anchor as supplied by the maker, reduced by the safety coefficient 2.2.


Erection sequence



SM8 multi-level system erection sequence




1 • positioning the base

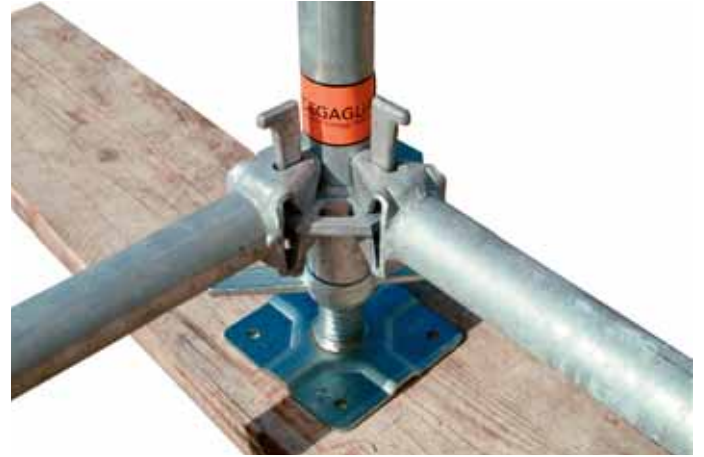

4 • transom erection



2 • levelling the base

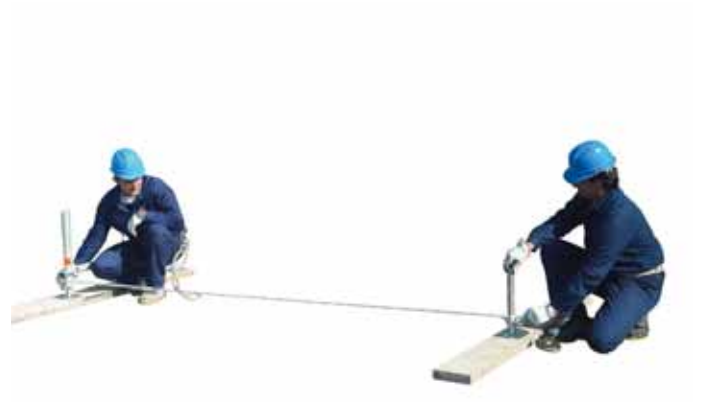

5 • positioning the next section



3 • ledger erection




6 • levelling the transverse

SM8 multi-level system erection sequence



7 • levelling the longitudinal

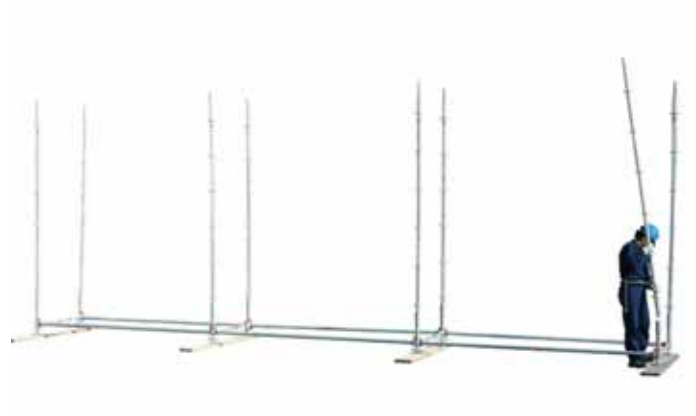


10 • erecting the uprights




8 • checking the final level



11 • erecting the upper ledgers

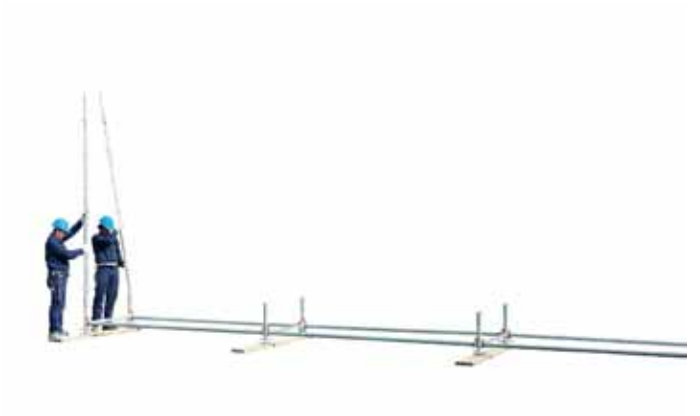

9 • erecting the uprights

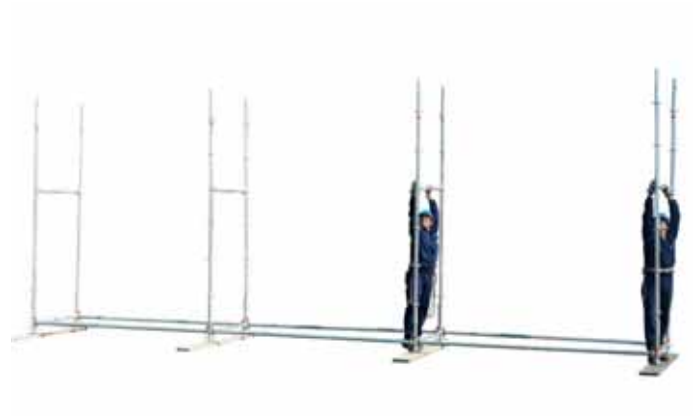

12 • erecting the upper ledgers

SM8 multi-level system erection sequence



13 • erecting metal ledger planks



16 • erecting ledger board with trapdoor



14 • erecting metal ledger planks



17 • erecting diagonals



15 • wedge insertion



18 • erecting diagonals

SM8 multi-level system erection sequence



19 • erecting diagonals



22 • erecting level 1 guard rail



20 • anchorage



23 • erecting level 1 guard rail



21 • passage to the upper level



24 • erecting level 1 guard rail

SM8 multi-level system erection sequence



25 • erecting side fencing structure



28 • securing the toeboards



26 • erecting side fencing structure



29 • erecting façade toeboard



27 • erecting side fencing toeboard



30 • erecting the upper uprights

SM8 multi-level system erection sequence



31 • erecting the upper uprights




34 • erecting level 2 ledgers and guard rails



32 • inserting spigot pin connector



35 • erecting diagonals every 4 fields per floor

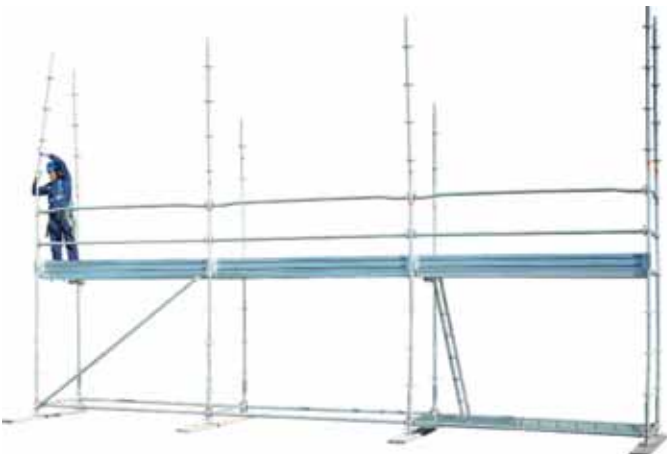

33 • erecting uprights to project specification height



36 • erecting level 2 scaffolding

SM8 multi-level system erection sequence




37 • erecting level 2 scaffolding



40 • anchorages



38 • erecting plank with trapdoor

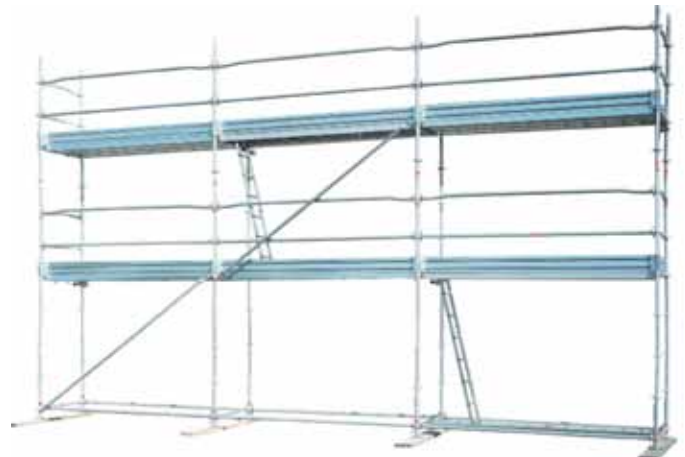

41 • scaffolding completed



39 • erecting level 2 guard rails



42 • typical layout

SM8 multi-level system erection sequence



43 • erecting bracket



46 • erecting street protection fan



44 • erecting overhanging plank



47 • erecting street protection fan



45 • inserting the wedge



48 • erecting street protection fan

SM8 multi-level system erection sequence




49 • erecting street protection fan



52 • erecting carriage beam guard rail




50 • carriage beams

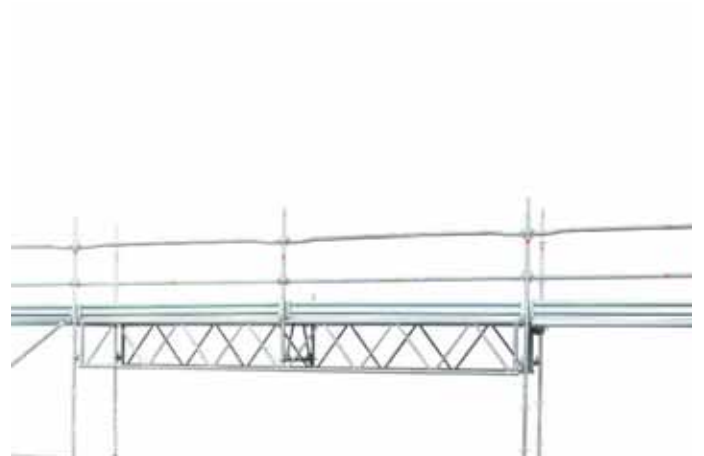

53 • carriage beams



51 • erecting carriage beam couplings

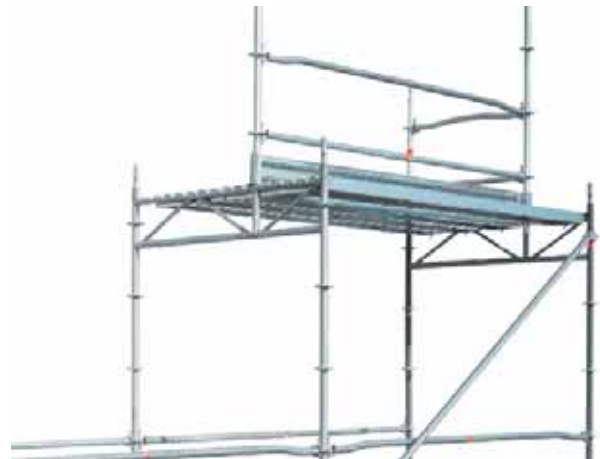

54 • pedestrian walkthrough

Certifications





中国合格评定国家认证委员会实验室认可证书 NO. CNAS L0684
Laboratory Accreditation Certificate Issued by China National Accreditation Service for
Conformity Assessment NO. CNAS L0684

国家计量认证合格证书 2008000516E 检测
National Metrology Authentication Certificate 2008000516E Testing

建筑工程质量检测机构 (京) 建检 2052 号
Construction Engineering Quality Testing Institution (Beijing) Construction Testing Z052



报告编号 Report No.: TC-JG1-Q-2009-07

SM8 脚手架检测报告

SM8 Scaffold Test Report



中冶集团建筑研究总院建筑工程检测中心

Construction Engineering Test Centre of
Central Research Institute of Building & Construction, MCC Group
2009年4月3日 Apr. 3, 2009



ISTITUTO ITALIANO DI
GARANZIA DELLA QUALITÀ

Certificato di prodotto **P021G**

RILASCIATO A:

MARCEGAGLIA BUILDTECH Srl

Unità Produttiva Milano
Via G. Della Casa, 12 20151 Milano

PER I PRODOTTI ED IN CONFORMITÀ AGLI SCHEMI SOTTO RIPORTATI:

Data inizio	Norma	Schema	Descrizione di norma	Descrizione commerciale
10/12/2003	SQ Ponteggi	SC009	Ponteggio metallico fisso	SM8 a montanti e traversi prefabbricati

IL PRESENTE CERTIFICATO È SOGGETTO AL RISPETTO DEL REGOLAMENTO PER LA CERTIFICAZIONE DI PRODOTTO

Milano, 1 giugno 2008

I PRODOTTI ELENCATI NEL PRESENTE
CERTIFICATO SONO MARCATI:





CON INDICAZIONE DEL NUMERO DI
CERTIFICATO E DELLA NORMA DI
RIFERIMENTO

Il Direttore
Ing. Dario Agalbato

ATTESTATION DE DROIT D'USAGE MARQUE - ÉQUIPEMENTS DE CHANTIER

Organisme certificateur :
AFNOR Certification - Siège : 11, avenue Francis de Pressensé - 93571 SAINT-DENIS LA PLAINE Cedex
Bureaux : 116, avenue Aristide-Briand - BP 40 - 92234 BAGNEUX Cedex
Secrétariat Technique - Laboratoire d'essais et Organisme d'inspection :
CEBTP - SOLEN - ZAC la Clef de Saint-Pierre - 12 avenue Guy-Lussac - Saint Quentin en Yvelines - 78990 ÉLANCOURT

ADMISSION À LA MARQUE 	
N° 16.01	du 13 / 07 / 2005
RECONDUCTION DE LA MARQUE 	
N° 16 04	du 15 / 10 / 2008
Identification de l'usine N°16	



La société :

MARCEGAGLIA Building S.p.A.
PONTEGGI DALMINE
Via Giovanni della Casa
I - 20151 MILANO

Pour son usine de: **GRAFFIGNANA**



Correspondant AFNOR Certification :
M. Olivier STEPHAN Tél : 01.46.11.37.26
Fax : 01.49.17.90.61
Correspondant CEBTP - SOLEN :
M. Michel ARVAULT Tél : 01.30.85.24.95
Fax : 01.30.85.21.80




est autorisée à apposer, sur les produits ci-dessous, la marque  de conformité aux normes NF EN 12810 parties 1 et 2 et NF EN 12811 parties 1, 2 et 3, relatives aux échafaudages de façade à composants préfabriqués, aux spécifications complémentaires du Référentiel -096 et dans les conditions fixées par celui-ci.




ÉCHAFAUDAGES DE FAÇADE À COMPOSANTS PRÉFABRIQUÉS								
Modèle (Date d'effet)	Structure porteuse	Trame maxi	Classe du modèle selon les planchers dont il est équipé					
			Planchers modulaires acier l = 0,33m				Planchers mixtes aluminium bois pour accès l = 0,66 m	
			k = 75 mm		k = 50 mm			
			N R	R	N R	R	N R	R
SM 8 (13/07/2005)	Structure multidirectionnelle- multiniveau Acier galvanisé $\sigma_s \geq 310 \text{ N/mm}^2$ Largeur 0,81 m	3,00 m	4	4	3	3	5	5
		2,50 m			4	4	6	6
		1,80 m			4	4	6	6
	Largeur 1,14 m	3,00 m	4	4	3	3	4	4
		2,50 m			3	3	4	4
		1,80 m			3	3	5	5

Attention : pour la signification des abréviations et les conditions d'attribution des classes, se reporter à l'avertissement en page 2 du présent document

Pour se référer à la marque , une structure d'échafaudage montée à partir d'un modèle certifié ne doit comporter, pour les sous-ensembles soumis au marquage, que ceux figurant dans la nomenclature  du modèle.

La nomenclature  du modèle ci-dessus est donnée en page 4 du présent document.

Elle fait partie intégrante de l'attestation.

Cette décision annule et remplace toute décision antérieure.
Elle est prononcée au vu des résultats des contrôles internes à l'entreprise, ceux-ci ayant été confirmés par les essais réalisés lors des visites effectuées par l'organisme de vérification et le cas échéant par les essais réalisés au laboratoire de la marque.
Le droit d'usage de la marque  est accordé pour une durée d'un an à compter de la présente décision, sous réserve des contrôles effectués par AFNOR CERTIFICATION qui peut prendre toute sanction conformément aux Règles générales de la marque  et au Référentiel -096.

Le Directeur Général Délégué

Jacques BESLIN

NOMENCLATURES

SM 8

Désignation des sous-ensembles	Références
Vérins de pied	3040501102 - 3040501102
Socle fixe (platine de pied)	3040501126
Portique passage piétons	3150800181
Chevêtre pour passage piéton	3150800161
Montants	3150100481 - 3150100471 - 3150100461 - 3150100451 - 3150100441 - 3150100431 - 3150100421 - 3150100411
Élément de départ	3150100401
Longerons (moîsés)	3150201271 - 3150201151 - 3150201141 - 3150201171 - 3150201161
Traverses	3150201121 - 3150201131
Traverses renforcées	3150300821 - 3150300811 - 3150300801
Lisses supérieures pour garde corps	3150201281 - 3150201221 - 3150200211 - 3150201241 - 3150201201 - 3150201191 - 3150201231 - 3150201181
Garde-corps de montage et d'exploitation	3150201291 - 3150201101 - 3150201091 - 3150201081
Diagonales de façade	3150500471 - 3150500431 - 3150500391 - 3150500381 - 3150500371
Diagonales en plan	3150400351 - 3150400341 - 3150400281 - 3150400331 - 3150400271 - 3150400321 - 3150400291 - 3150400311 - 3150400301
Diagonales latérales	3150500461 - 3150500451
Consoles	3150700121 - 3150700151 - 3150700361 - 3150700371
Arbalétriers renfort de console	3150700381 - 3150700391
Poutres de franchissement	3150800311 - 3150800301 - 3150800291
Chevêtres de liaison de poutres	3150800331 - 3150800321
Échelle d'accès - Main courante	3070300191 - 3070300201
Plaqueau indicateur des charges d'exploitation	6050500220
La classe d'un modèle dépend des planchers dont il est équipé. Se reporter à l'attestation ou aux étiquettes collées sur les planchers.	
Modules en acier galvanisé pour plancher :	
* hauteur 75 mm - largeur 0,33 m x longueur [3,0 m]	3070101581
* hauteur 50 mm - largeur 0,33 m x longueur [3,0 m] [2,5 m] [1,8 m] [1,14 m] [0,81 m]	3070101631 - 3070101291 - 3070101281 - 3150201001 - 3150200991
Platoux mixtes aluminium-bois à trappe pour planchers d'accès :	
* largeur 0,66 m x longueur [3,0 m] [2,5 m] [1,8 m]	3070101559 - 3070101659 - 307011649

	Partener  Germany			<small>INSTITUTUL DE CERCETARI PENTRU ECHIPAMENTE SI TEHNOLOGII IN CONSTRUCTII</small> <small>RESEARCH INSTITUTE FOR CONSTRUCTION EQUIPMENT AND TECHNOLOGY</small>			
<small>Sos. Pantelimon 266, sector 2, cod postal 021652, CP. 3-33, Bucuresti, Tel. 004021 2550734; Fax: 004021 2551420; e-mail: icecon@icecon.ro</small>							
<h2 style="margin: 0;">CERTIFICAT DE CONFORMITATE</h2> <p style="margin: 0;">Nr. 460/28.06.2007</p> <p style="margin: 0;">Produsele SCHELE DE FAȚADĂ, DIN OȚEL SM 8 4D – SW 09/180-H1-B-LS; SM 8 4D – SW 09/250-H1-B-LS; SM 8 4D – SW 09/300-H1-B-LS;</p> <p style="margin: 0;">introduse pe piață de către MARCEGAGLIA BUILDING S.p.A. Via BRESCIANI 16, 46040, GAZOLDO DEGLI IPPOLITI, MANTOVA - ITALIA tel: (0039) 03766851, fax: (0039) 0376685600</p> <p style="margin: 0;">și fabricate de către MARCEGAGLIA BUILDING S.p.A. Via S. Colombano 63, 26813 Graffignana, Lodi, ITALIA tel: (0039)037120681, fax: (0039)0371206830</p> <p style="margin: 0;">sunt supuse de către producător încercărilor inițiale de tip, unui control al producției în fabrică și încercărilor suplimentare pe eșantioane prelevate de la locul producției după un plan de încercări prestabilit și că organismul notificat ICECON CERT a efectuat inspecția inițială a locului de producție și a controlului producției în fabrică și efectuează supravegherea continuă, evaluarea și acceptarea controlului producției în fabrică.</p> <p style="margin: 0;">Acest certificat atestă că toate prevederile referitoare la atestarea controlului producției în fabrică descrise în documentele de referință SR EN 12810-1,2:2004 și SR EN 12811-1,2,3:2004</p> <p style="margin: 0;">au fost aplicate.</p> <p style="margin: 0;">Prezentul certificat a fost eliberat la 28.06.2007 și rămâne valabil până la data de 28.06.2010, în condițiile în care nu sunt modificate semnificativ cerințele prevăzute în documentele de referință sau condițiile de fabricație de la locul de producție ori controlul producției în fabrică.</p> <p style="margin: 0;">Domeniu de utilizare: Scopuri de inspecție și pentru lucrări care nu necesită depozitarea de materiale și elemente de construcții, excepție fac acelea care se folosesc imediat (lucrări de vopsitorie, de curățare a pietrei, umplerea rosturilor și lucrări de tencuială).</p> <table border="0" style="width: 100%;"><tr><td style="width: 40%;"><p>PRESEDINTE - DIRECTOR GENERAL Prof.Univ.Dr.Ing.Dr.h.c. Polidor BRATU Membru al Academiei de Științe Tehnice</p></td><td style="width: 20%; text-align: center;"></td><td style="width: 40%;"><p>ICECON CERT Director Executiv Ing. Genica ANTOHE</p></td></tr></table> <p style="text-align: center; font-size: small;">Prezentul CERTIFICAT DE CONFORMITATE a fost emis la solicitarea MARCEGAGLIA BUILDING S.p.A. Acest document nu înlocuiește DECLARAȚIA DE CONFORMITATE</p> <p style="text-align: center; font-size: x-small;">ICECON CERT - ORGANISM CERTIFICARE PRODUSE SI ECHIPAMENTE PENTRU CONSTRUCTII SI GOSPODARIE COMUNALA, sediul: BENAR, nr. 049-C</p>					<p>PRESEDINTE - DIRECTOR GENERAL Prof.Univ.Dr.Ing.Dr.h.c. Polidor BRATU Membru al Academiei de Științe Tehnice</p> 		<p>ICECON CERT Director Executiv Ing. Genica ANTOHE</p> 
<p>PRESEDINTE - DIRECTOR GENERAL Prof.Univ.Dr.Ing.Dr.h.c. Polidor BRATU Membru al Academiei de Științe Tehnice</p> 		<p>ICECON CERT Director Executiv Ing. Genica ANTOHE</p> 					

MATERIALPRÜFUNGSAMT FÜR DAS BAUWESEN DER TECHNISCHEN UNIVERSITÄT MÜNCHEN

Briefanschrift: 80290 München

Hausadresse: Theresienstr. 90 / Ecke Arcisstr. (Gebäude N6), 80333 München

MVV-Haltestellen: U2 THERESIENSTRASSE, Straßenbahn Linie 27 NEUE PHAKOTHEK

Bayerische Landesbank München (BLZ 700 500 00) - Kto. Nr.: 24 866

USt-Id-Nr.: DE 129 524 042

Telefon: (089) 2892-3000

Telefax: (089) 2892-2522

Durchwahl: (089) 2892-2523

UNTERSUCHUNGSBERICHT

Nr. 2681 'vdH
vom 12.09.98
Labor-Nr. 2543-30

Betreff: Zulassungsversuche mit dem Gerüstknoten System Multipiano

Auftraggeber: FA. PONTEGGI-DALMINE SPA
Via Giovanni Della Casa, 12
I-20151 Milano

Auftragschreiben: vom 8.10.1996 und 11.10.1996

Probenahme: Durch den Auftraggeber

Probeneingang: 19.6.97, 25.3.98, 4.5.98, 17.8.98

Der Untersuchungsbericht umfaßt: 28 Textseiten
217 Anlagen
32 Lichtbilder

Das Prüfungszeugnis darf nur ungekürzt veröffentlicht werden.

Die gekürzte oder auszugsweise Veröffentlichung bedarf der vorherigen Genehmigung des Materialprüfungsamtes.



Construction equipment division
Divisione cantieristica edile

via Giovanni della Casa, 12
20151 Milano - Italy
Tel. +39 . 02 30 704 1
Fax +39 . 02 33 402 706
cantieristica@marcegaglia.com
www.marcegaglia.com